

No.	F079-3676
ISSUED:	Mar. 12, 2012
REVISED:	Feb. 12, 2015



HOSHIZAKI SELF-CONTAINED FLAKER

MODEL FM-80KE(-N)
(F079, F079-C106)

PARTS LIST **(HE)**

B-1 JAN. 2012
C-0 JAN. 2013
C-1 APR. 2013

AUXILIARY CODE

U - 1

The auxiliary code is the first two characters in the serial number. The first character indicates the production year. Years progress or regress in alphabetical order. The series of letters and skipped letters depend on UL listing, production, and model. See the auxiliary code(s) and corresponding year(s) on the front cover.


The second character indicates significant part changes within the same year. Base is "1" and this number advances for each change. If there is no significant part change at the turn of the year, this number starts from "0."

MARKS LOCATED UNDER THE AUXILIARY CODE

- = Part deleted.
- x = Part deleted and replaced by "o" part.
- o = New part in place of "x" part.

FASTENER PART NUMBER


SCREWS

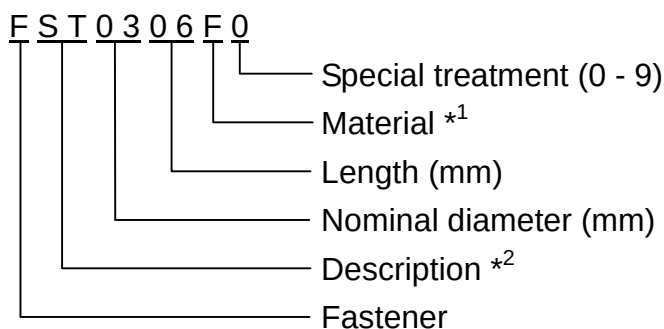

*¹ Material


F: Steel
S: Austenitic stainless steel
M: Martensitic stainless steel
B: Copper alloy
P: Polycarbonate
N: Polyamide
V: PVC
A: ABS
X: Polyacetal
L: Aluminum

NUTS & WASHERS

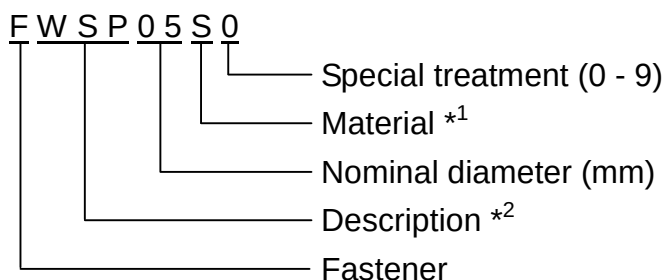

*² Description

First letter
S: Machine screw
T: Tapping screw
M: Wood screw
B: Bolt
W: Washer
N: Nut

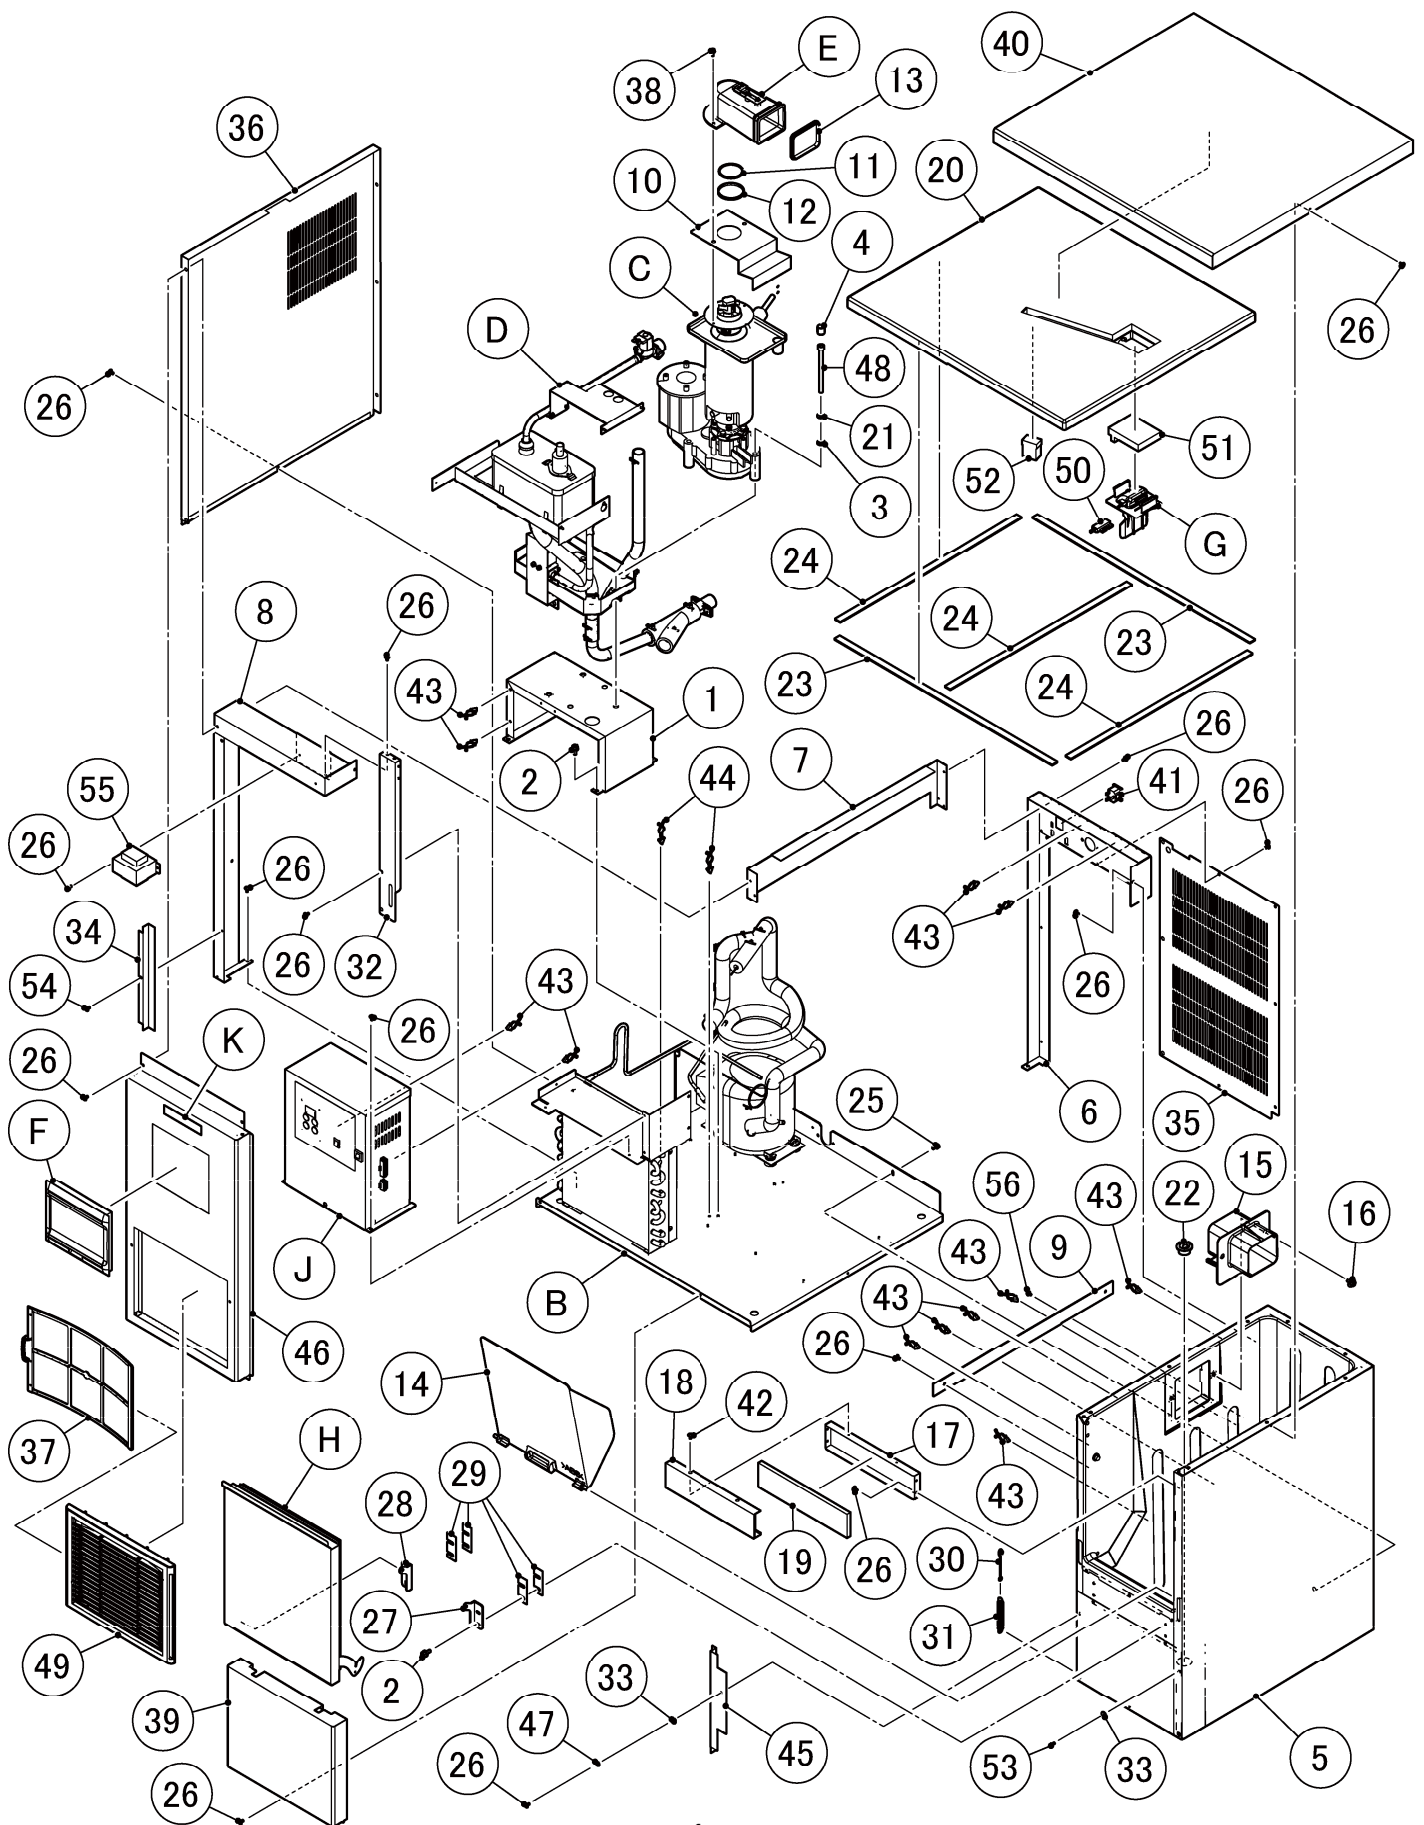

HE


MODEL: FM-80KE, FM-80KE-N								
TITLE: A. ICE FLAKER ASSY								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
B	REFRIGERATION CIECUIT		121629A01	1	1			
C	ICE MAKING UNIT		376130A01	1	1			
		F079-C106	376130001	1	1			
D	WATER CIRCUIT ASSY		121617A01	1	1			
E	SPOUT ASSY		358941A01	1	1			
F	WINDW PANEL ASSY		348243A03	1	1			
G	ACTUATOR ASSY		350301A01	1	1			
H	DOOR ASSY		373745A01	1	1			
J	CONTROL BOX ASSY		261574A01	1	1			
K	LABEL LOCATION		261550A01	1	1			
		F079-C106	261550A02	1	1			
N	ACCESSORIES		A02455-01	1	1			
1	BRACKET / GM		376111G01	1	1			
2	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0616S0	8	8			
3	SEAL WASHER		458299-01	3	3			
4	VINYL CAP		451272-01	3	3			
5	BIN - FOAMED		261571G01	1	1			
6	REAR FRAME		261572M01	1	1			
7	SIDE FRAME		376024M01	1	1			
8	FRONT FRAME		263035M01	1	1			
9	BRACE - EVAPORATOR		476423M01	1	1			
10	BRACKET-EVA		376026M01	1	1			
11	O-RING		7616-G045	1	1			
12	RING		432661-03	1	1			
13	PACKING (A) - SPOUT		427152-02	1	1			
14	SLOPE		362588G01	1	1			
15	SPOUT(B)		232654-02	1	1			
16	BOLT		462612-01	2	2			
17	FRONT BRACE - BIN		466313-01	1	1			
18	FRONT FRAME - BIN		466312-01	1	1			

HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: A. ICE FLAKER ASSY								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
19	INSULATION - FRONT		466394-01	1	1			
20	UPPER PANEL		258350G01	1	1			
21	SPRING WASHER		FWSP08S0	3	3			
22	DRAIN PIPE		466275-01	1	1			
23	SOFT TAPE		121619Z01	2	2			
		F079-C106	476416Z01	2	2			
24	SOFT TAPE		121619Z02	3	3			
		F079-C106	476418Z01	3	3			
25	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0512S0	1	1			
26	TRUSS HEAD TAPPING SCREW (S-TITE)		FTS0408M0	44	44			
27	HINGE (A)		4H2583-01	1	1			
28	HINGE(L)		4H2584-01	1	1			
29	HINGE SPACER (B)		4H0605-02	2	2			
30	HOOK		404060-07	1	1			
31	SPRING		4H0491-01	1	1			
32	FRONT PLATE		358898-01	1	1			
33	TAPER COLLAR		4H0171-01	2	2			
34	BARRIER - AIR		466295-01	1	1			
35	REAR PANEL(L)		261575M01	1	1			
36	SIDE PANEL(L)		261576M01	1	1			
37	AIR FILTER		2X0416G01	1	1			
38	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0412S0	3	3			
39	FRONT PANEL (R)		362595-01	1	1			
40	TOP PANEL		241759-01	1	1			
41	CONNECTOR		P00245-02	1	1			
42	TRUSS HEAD TAPPING SCREW T2		FT20408M0	2	2			
43	CLAMP	No. 249	427902-03	12	12			
44	CLAMP	No.1F55	427902-07	2	2			
45	BARRIER - AIR		468195-01	1	1			
46	FRONT PANEL		376112G01	1	1			
47	FLAT WASHER		FWPL04F0	1	1			


HE

[illegible]

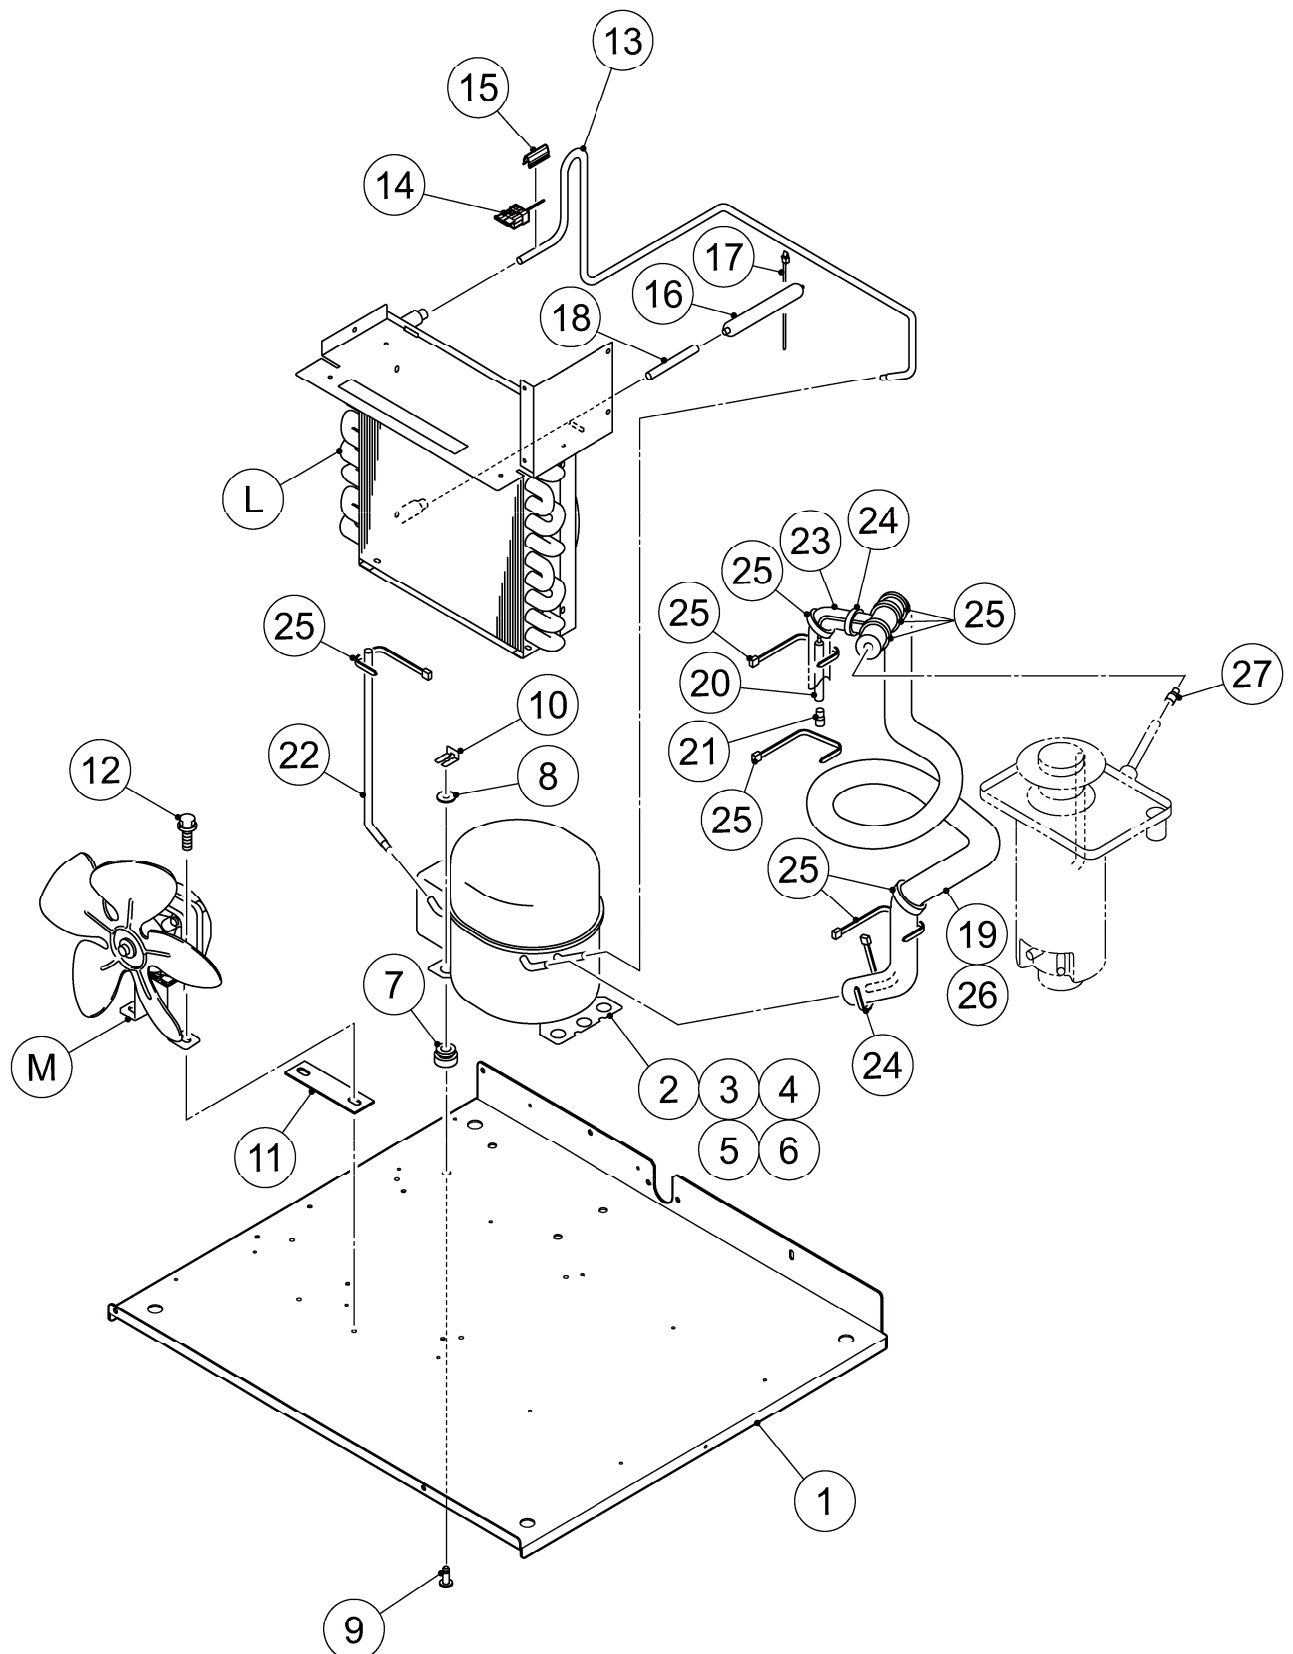


HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: B. REFRIGERATION CIRCUIT								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
L	CONDENSER ASSY		261613A01	1	1			
M	FAN MOTOR ASSY		3Y5554A01	1	1			
1	BASE		261577G01	1	1			
2	COMPRESSOR	TLS6F	450900-01	1	1			
3	STARTING RELAY	CM ACCESSORIES	451264-01	1	1			
4	STARTING CAPACITOR	CM ACCESSORIES	452765-01	1	1			
5	CORD RELIEF	CM ACCESSORIES	4A3264-01	1	1			
6	COVER	CM ACCESSORIES	450896-01	1	1			
7	RUBBER GROMMET		450897-01	4	4			
8	WASHER		450894-01	4	4			
9	STEEL PIN		452255-01	4	4			
10	CLIP		452256-01	4	4			
11	SPACER - FAN MOTOR		468443-01	1	1			
12	HEX.BOLT SW	6 x 20	458660-01	2	2			
13	COPPER TUBE(A) - HIGH SIDE		376077G01	1	1			
14	THERMISTOR ASSY		476475G01	1	1			
15	THERMISTOR - HOLDER		458132-01	1	1			
16	DRIER		445655-05	1	1			
17	TIE	RT30SSF5	457167-01	1	1			
18	CHARGE TUBE	L=72	476448M01	1	1			
19	HEAT EXCHANGER		261650G01	1	1			
20	COPPER TUBE - CAPILLARY		463885-02	1	1			
21	REDUCER	9.52 x 8	421904-17	1	1			
22	PROCESS TUBE - LOW SIDE		468444-01	1	1			
23	INSULATION TUBE	L=90	H71030300	1	1			
24	CABLE TIE	CV-100	7920-0002	2	2			
25	CABLE TIE	CV-150	7920-0003	9	9			
26	RUBBER SHEET		446470-01	1	1			
27	REDUCER		421904-23	1	1			

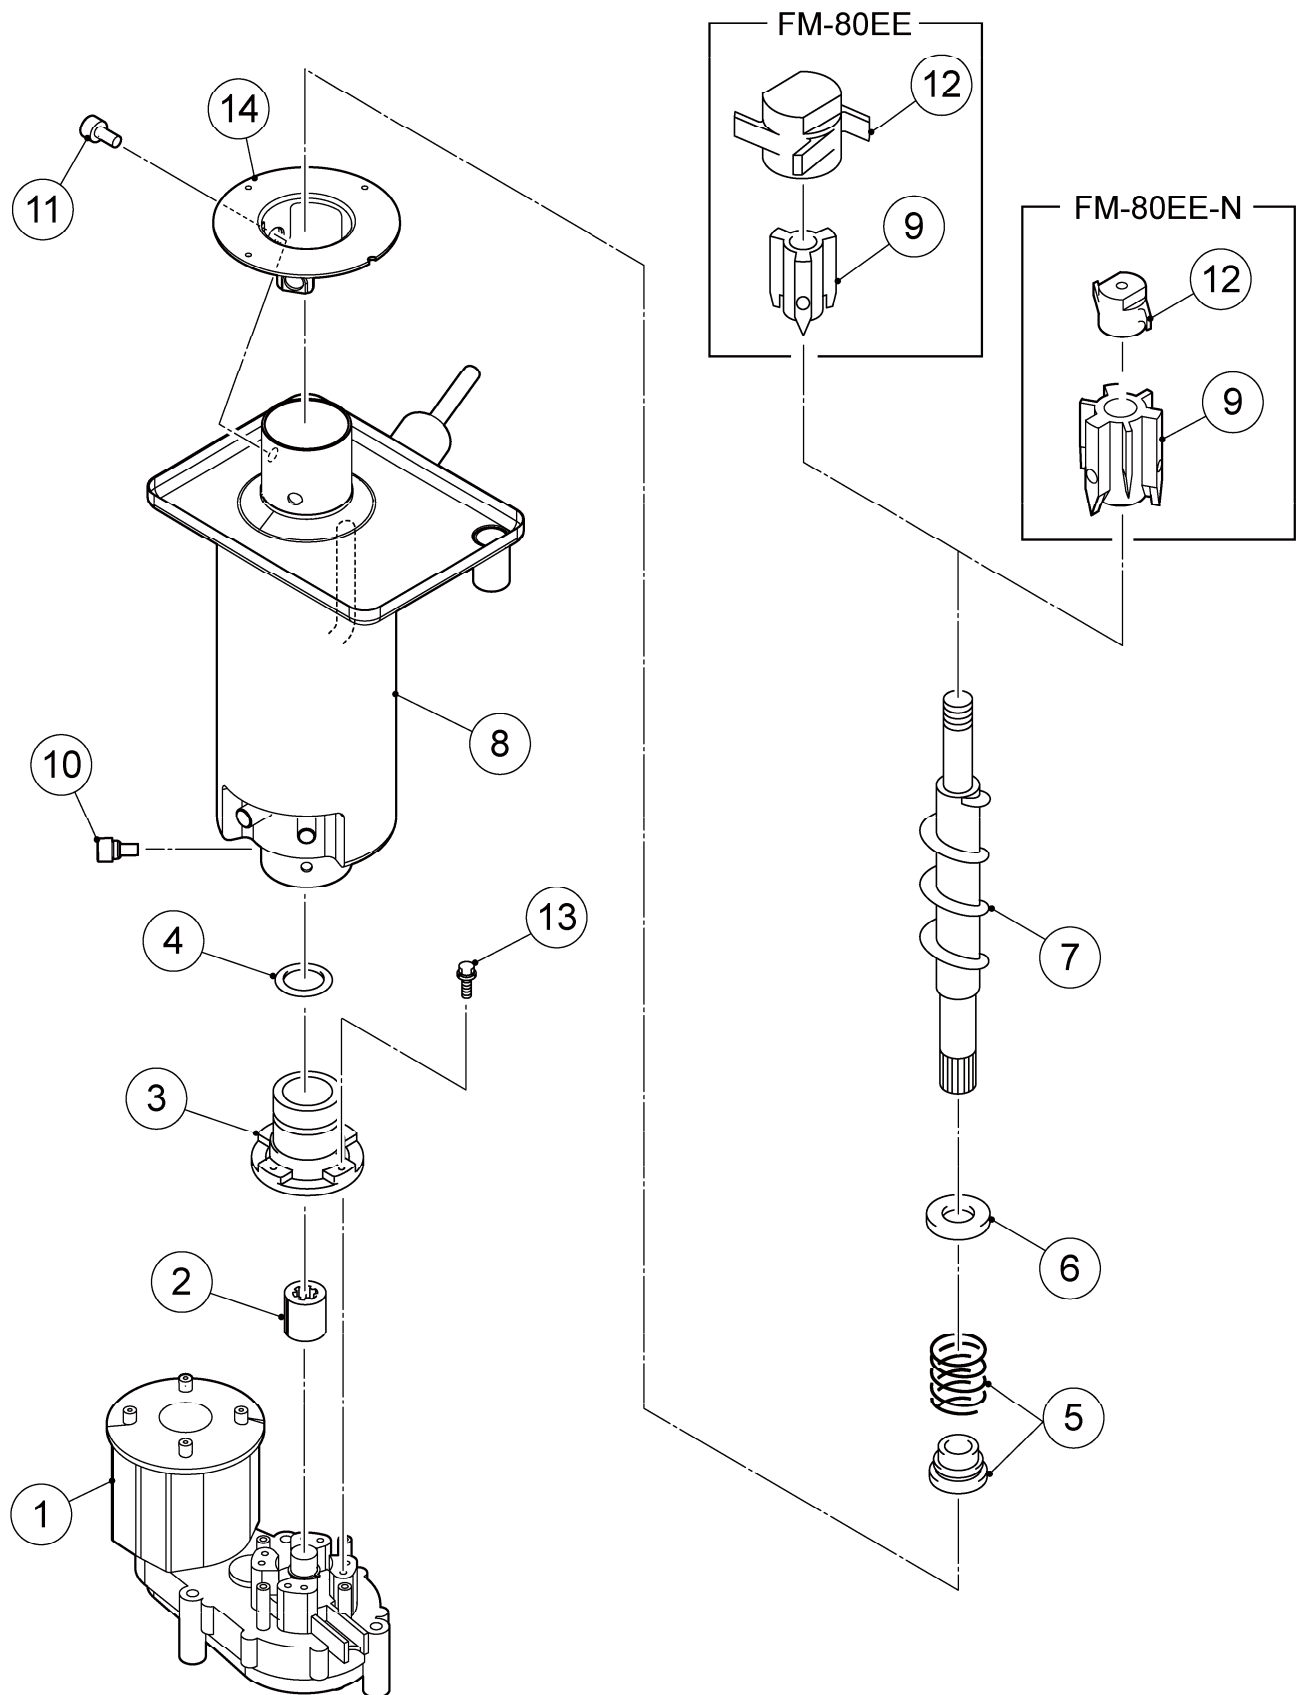

HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: C. ICE MAKING UNIT								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
1	GEAR MOTOR		P02068-02	1	1			
2	COUPLING-SPLINE ASSY		418316-01	1	1			
3	HOUSING		206013G05	1	1			
4	O RING		7616-G040	1	1			
5	MECHANICAL SEAL		432491-01	1	1			
6	RING(B)		432494-01	1	1			
7	AUGER		361013G01	1	1			
8	EVAPORATOR		241041G02	1	1			
9	EXTRUDING HEAD-45F		327140G01	1	1			
	EXTRUDING HEAD(NUGGET)	F079-C106	327141G01	1	1			
10	SCREW		P01718-01	4	4			
11	SEALBOLT-M8		P01768-01	3	3			
12	4 CUTTER		427137-01	1	1			
	CUTTER	F079-C106	440905-01	1	1			
13	HEX.BOLT SW	6 x 20	458660-01	4	4			
14	FLANGE/45		464843-01	1	1			

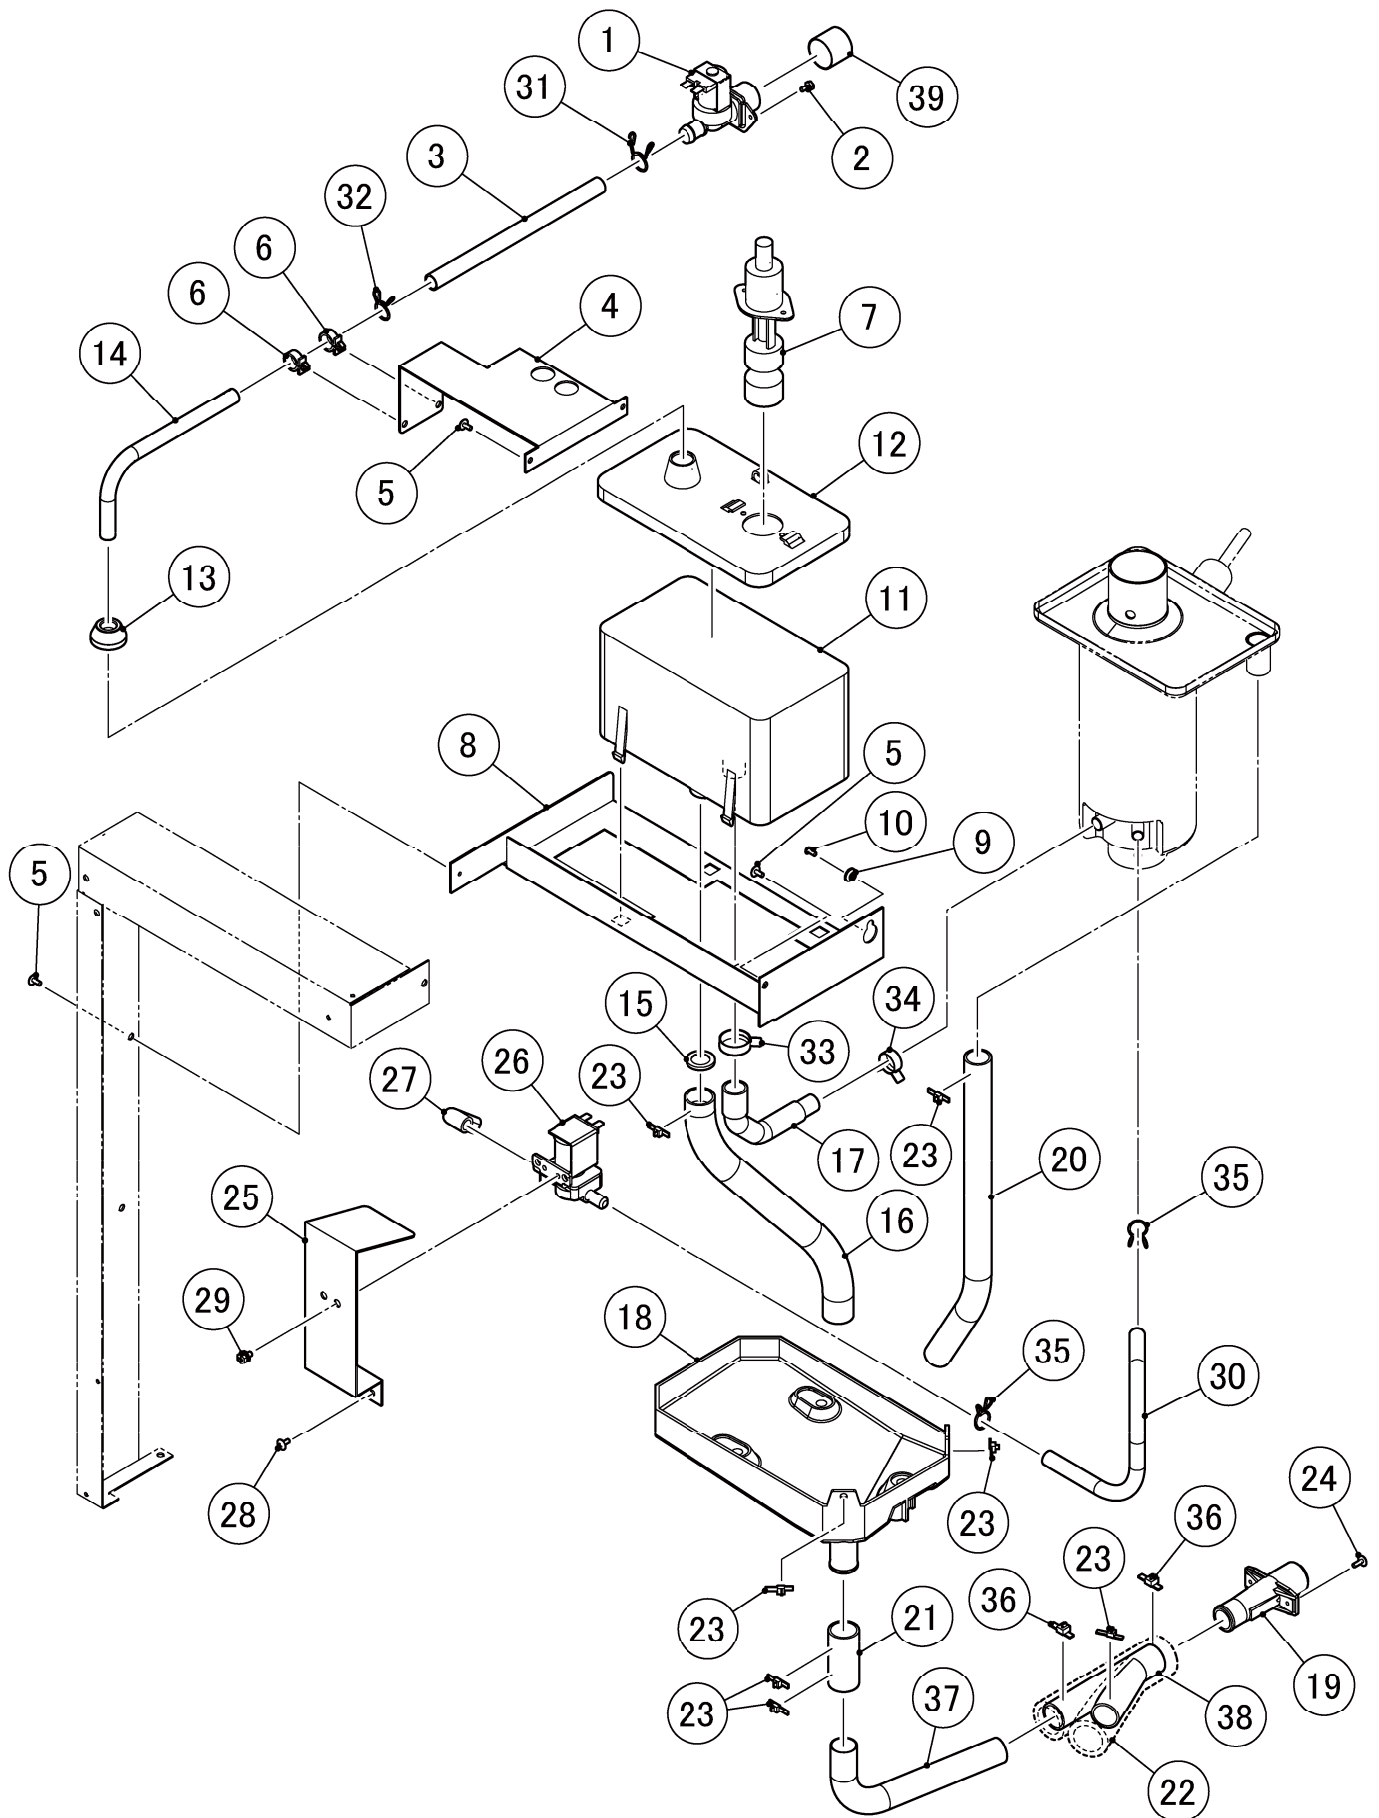


HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: D. WATER CIRCUIT								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
1	WATER VALVE		452993-01	1	1			
2	HEX HEAD BOLT		FBH0408F0	2	2			
3	SILICONE HOSE		4Y6912R01	1	1			
4	PIPE BRACKET		476456M01	1	1			
5	TRUSS HEAD MACHINE SCREW		FST0408F0	4	4			
6	CLAMP		428644-03	2	2			
7	FLOAT SWITCH		458279-01	1	1			
8	RESERVIOR BRACKET		362979-01	1	1			
9	TAPER COLLAR		4H0171-01	1	1			
10	RIVET	SSD43BS	7170-0003	1	1			
11	RESERVOIR		232626-01	1	1			
12	COVER - RESERVOIR		232627-01	1	1			
13	COVER - RESERVOIR INLET		415094-01	1	1			
14	WATER SUPPLY PIPE (A)		476457M01	1	1			
15	STOPPER COVER(R)		4X1497G01	1	1			
16	PVC Hose		HA2226300	1	1			
17	HOSE A		458308-01	1	1			
18	DRAIN PAN		261640P01	1	1			
19	DRAIN PIPE		321035-01	1	1			
20	PVC Hose		HA1923340	1	1			
21	PVC Hose		HA2226030	1	1			
22	INSULATION TUBE		H72636B18	1	1			
23	TIE	CV-150	7920-0003	7	7			
24	TRUSS HEAD TAPPING SCREW T2		FT20410F0	2	2			
25	BRACKET/WV		476458M01	1	1			
26	WATER VALVE		468655-01	1	1			
27	DRAIN PIPE		460263-01	1	1			
28	TRUSS HEAD MACHINE SCREW		FST0408S0	2	2			
29	HEX HEAD BOLT (SPRING WASHER		FBK0508S0	2	2			
30	PVC Hose - FSA		HD0912240	1	1			
31	HOSE CLAMP		435934-03	1	1			


HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: D. WATER CIRCUIT								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
32	HOSE CLAMP		435934-02	1	1			
33	CLIP BAND		423866-08	1	1			
34	CLAMP		423866-04	1	1			
35	HOSE CLAMP		435934-01	2	2			
36	NYLON TIE	CV-200	7920-0010	2	2			
37	DRAIN PIPE		476676M01	1	1			
38	DRAIN JOINT		358882-01	1	1			
39	CAP		417323-01	1	1			

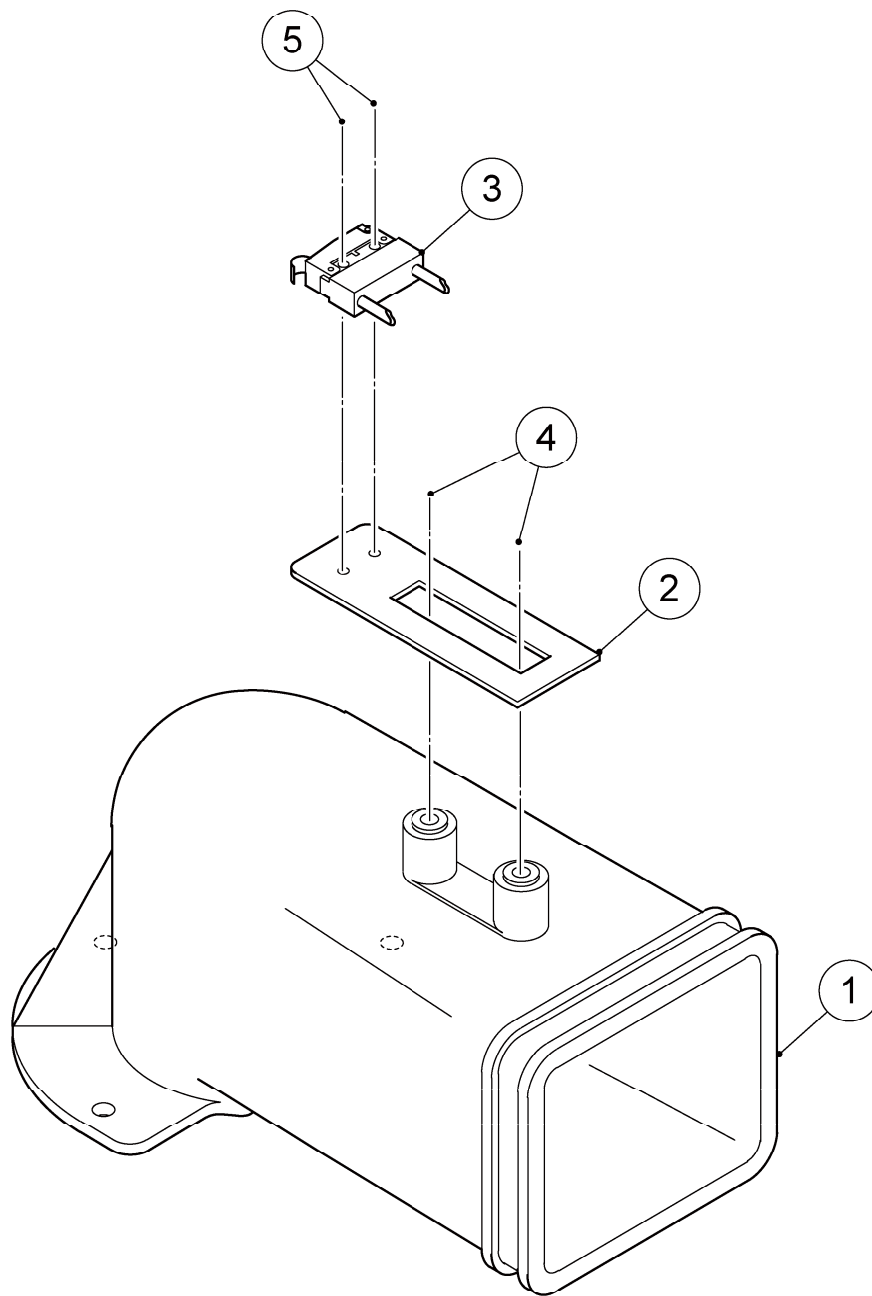


HE

[illegible]

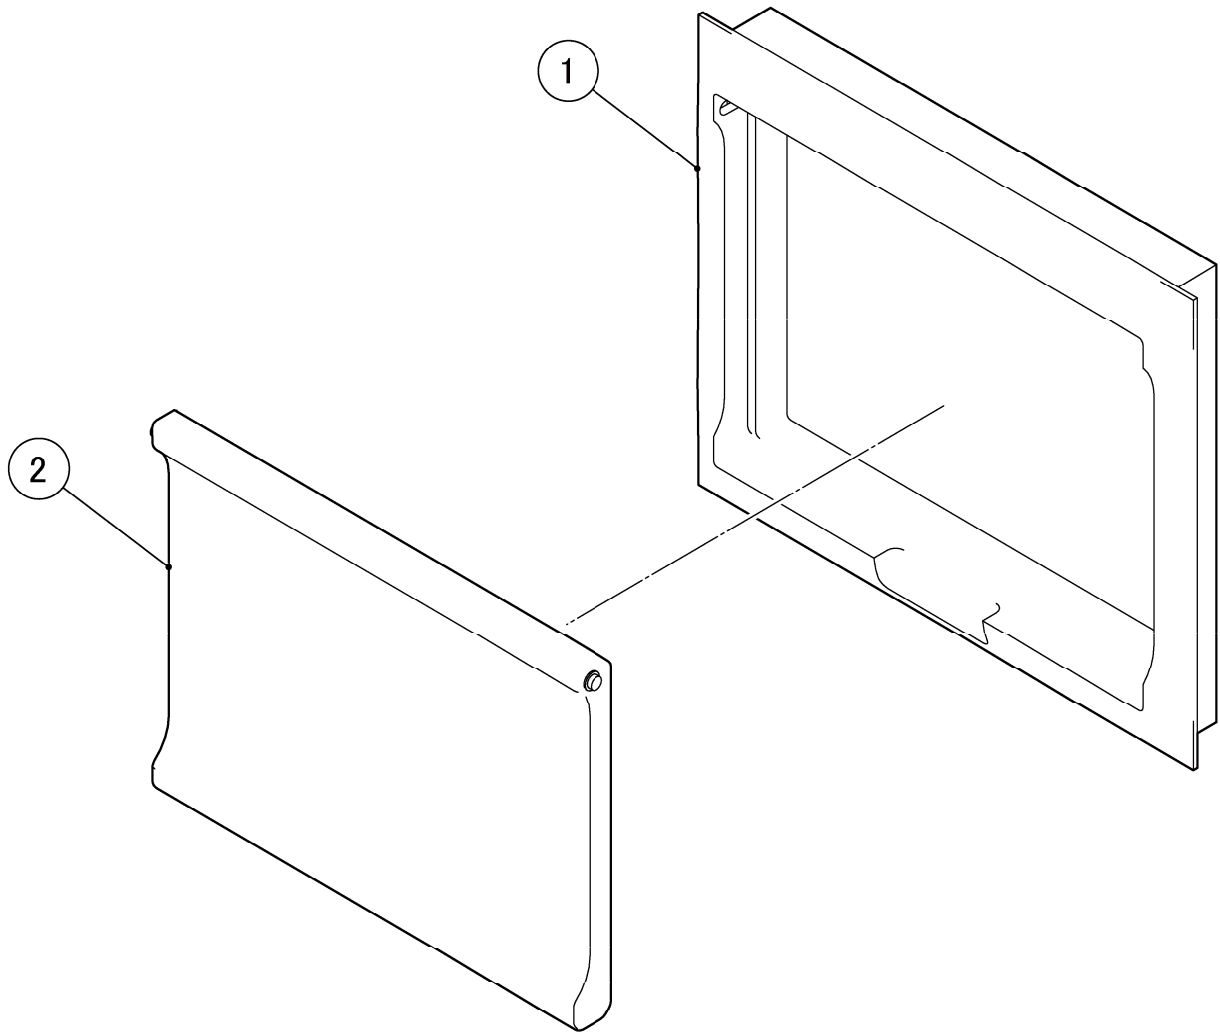


HE

[illegible]

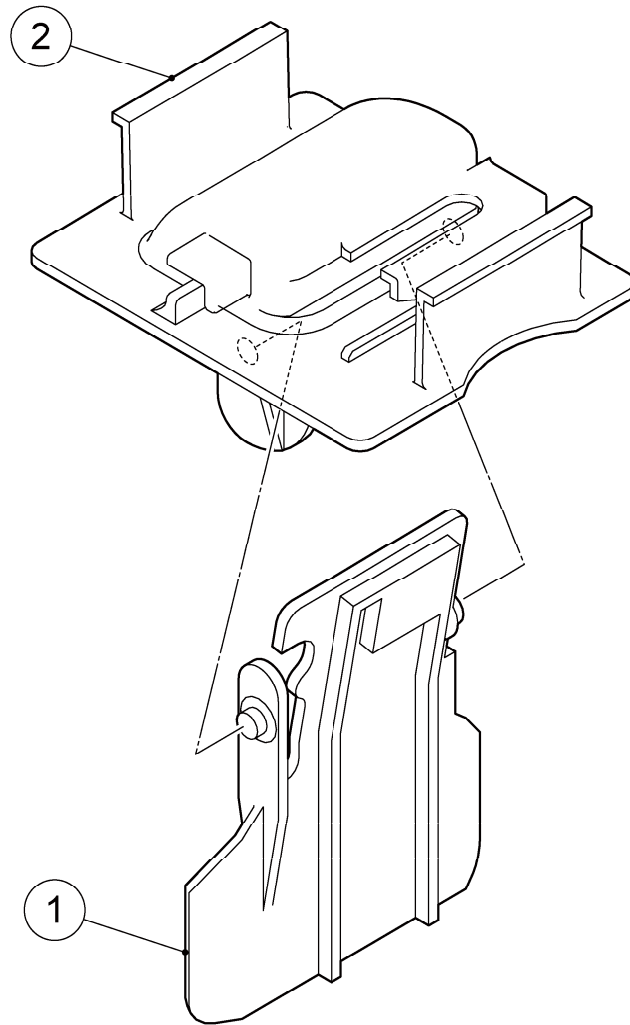


HE

[illegible]

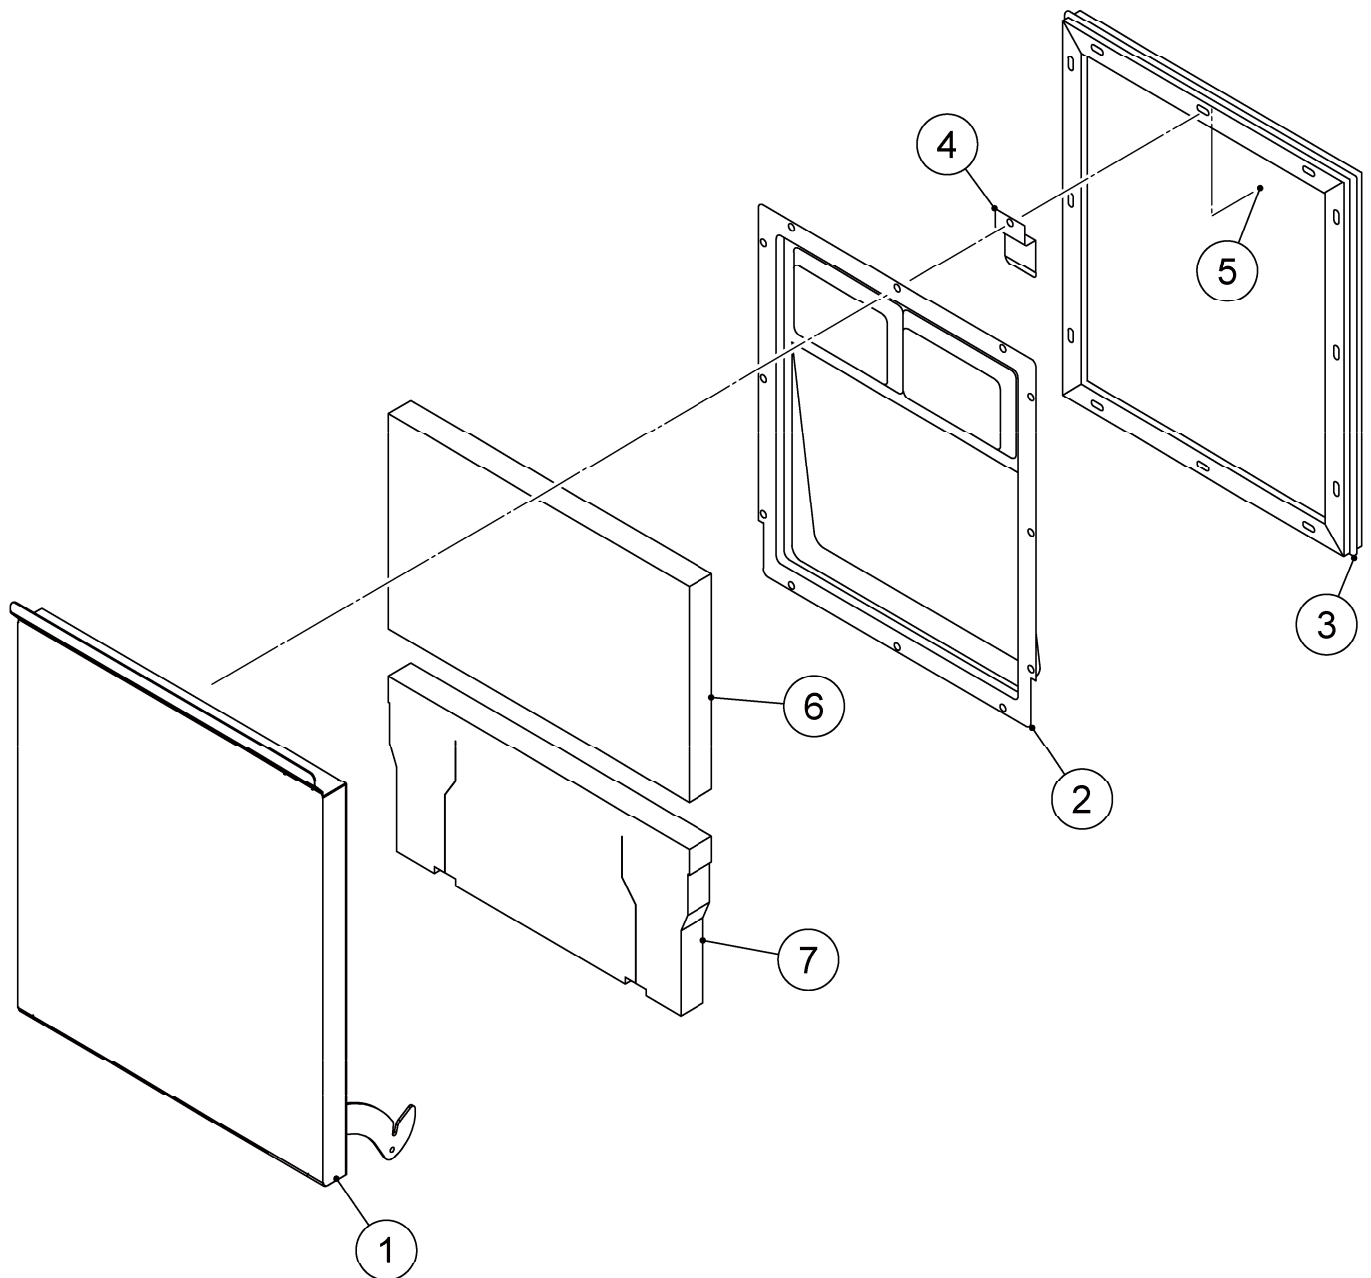


HE

[illegible]

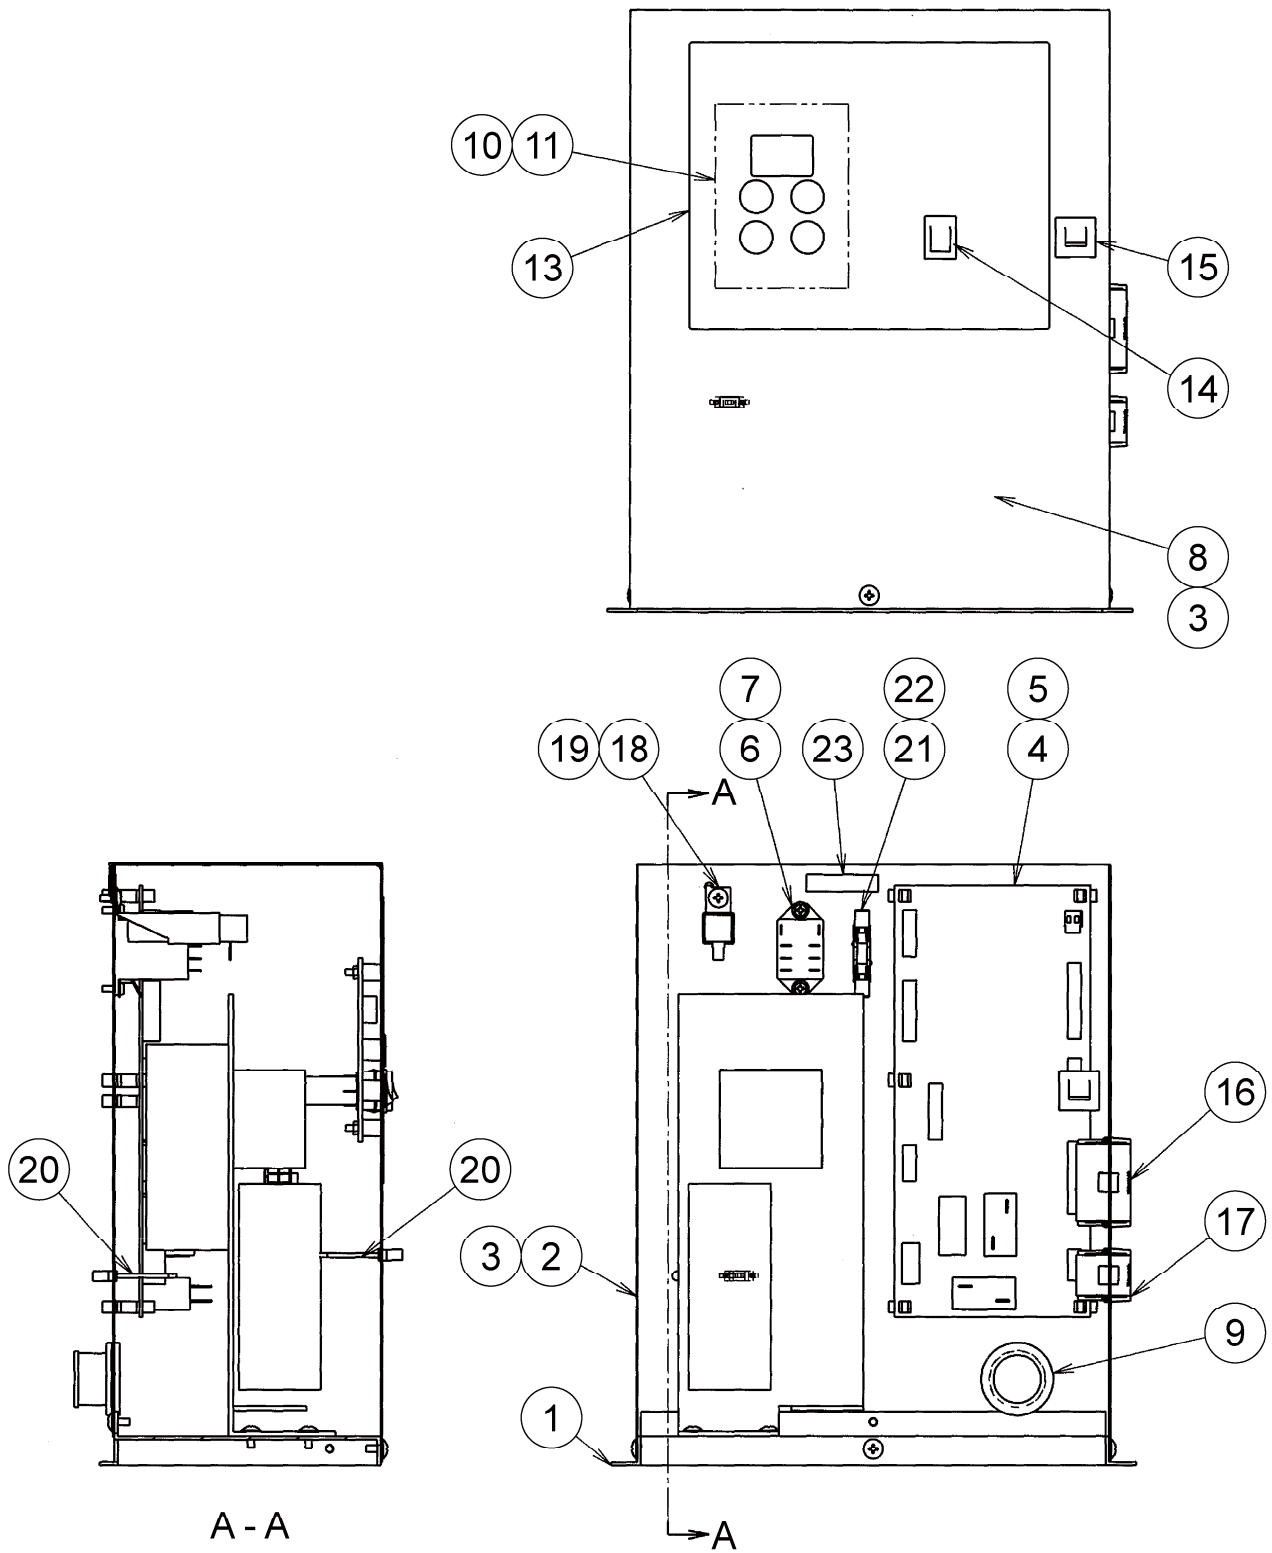


HE

MODEL: FM-80KE, FM-80KE-N								
TITLE: J. CONTROL BOX ASSY								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				B-1 C-0	C-1			
1	CONTROL BOX (A)		376114M01	1	1			
2	CONTROL BOX (B)		376113M01	1	1			
3	TRUSS HEAD MACHINE SCREW		FST0408F0	4	4			
4	CONTROLLER BOARD - 09CM		P01372-99	1	1			
5	BOARD SUPPORT	KGLS-6S	414929-01	6	6			
6	RELAY	LY2F AC240V	406132-08	1	1			
7	TAPPING SCREW	3x8	431415-01	2	2			
8	COVER A - CONT.BOX		376115G01	1	1			
9	GROMMET		4H2568-01	1	1			
10	SPACER	4EP-9	451658-05	4	4			
11	OPERATION BOARD - 09CM		P01373-01	1	1			
12	NUT		FNH103F0	4	4			
13	CONTROL LABEL		374148L01	1	1			
14	ROCKER SWITCH		460681-01	1	1			
15	PROTECTOR	W28XQIA-6	440972-03	1	1			
16	HARNESS (A)		376106G01	1	1			
17	HARNESS (B)		473845G01	1	1			
18	SUREGE ABSORBOR		436573-02	1	1			
19	TRUSS HEAD MACHINE SCREW	SUS 4x8	FST0408S0	1	1			
20	CLAMP	No.249	427902-03	2	2			
21	FUSE HOLDER		4Y2547-01	1	1			
22	FUSE		451924-02	1	1			
23	LABEL/FUSE		477494L01	1	1			

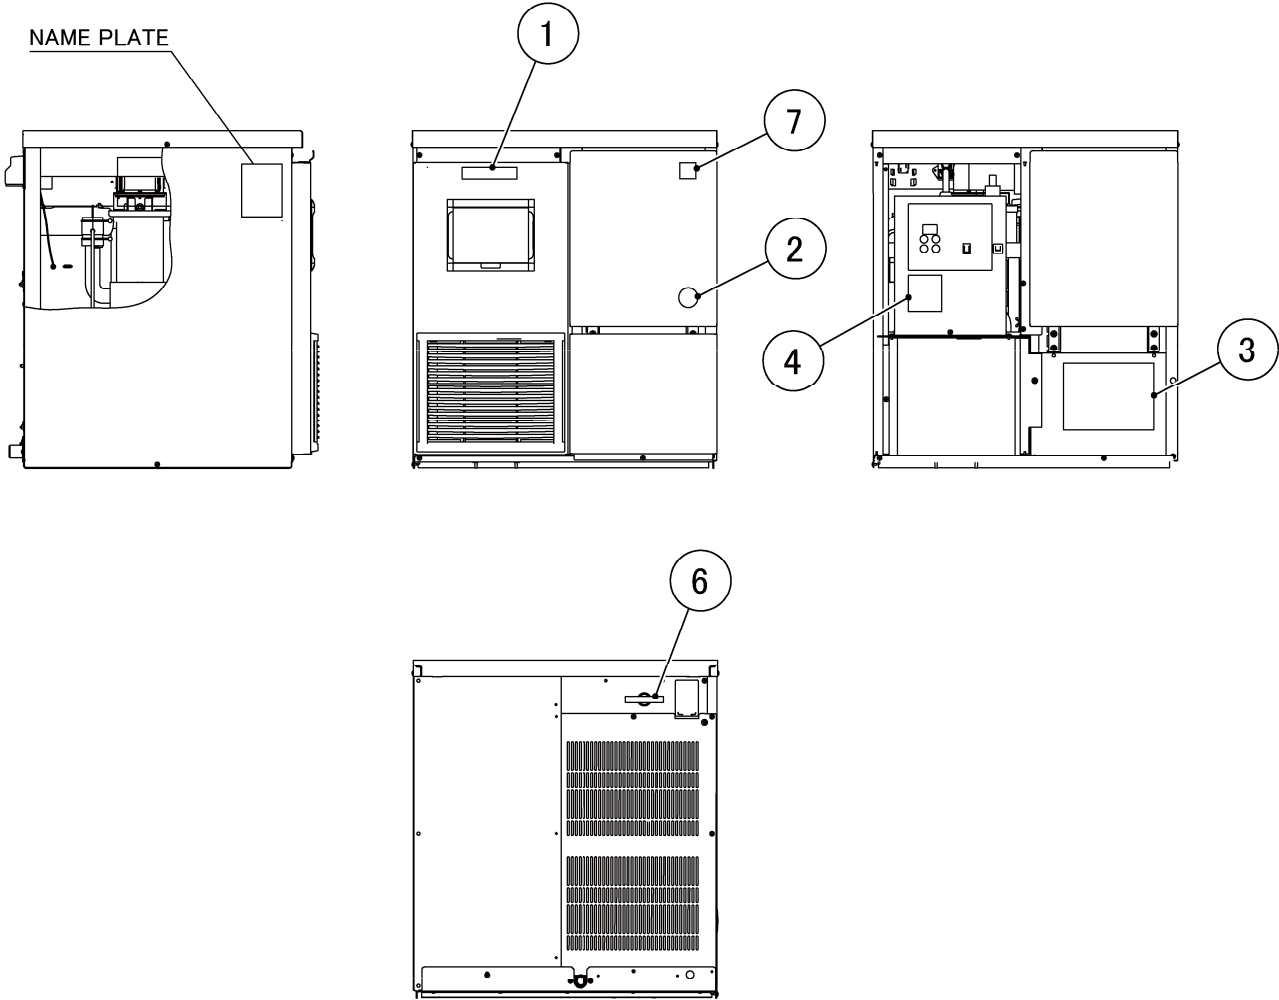


HE

[illegible]

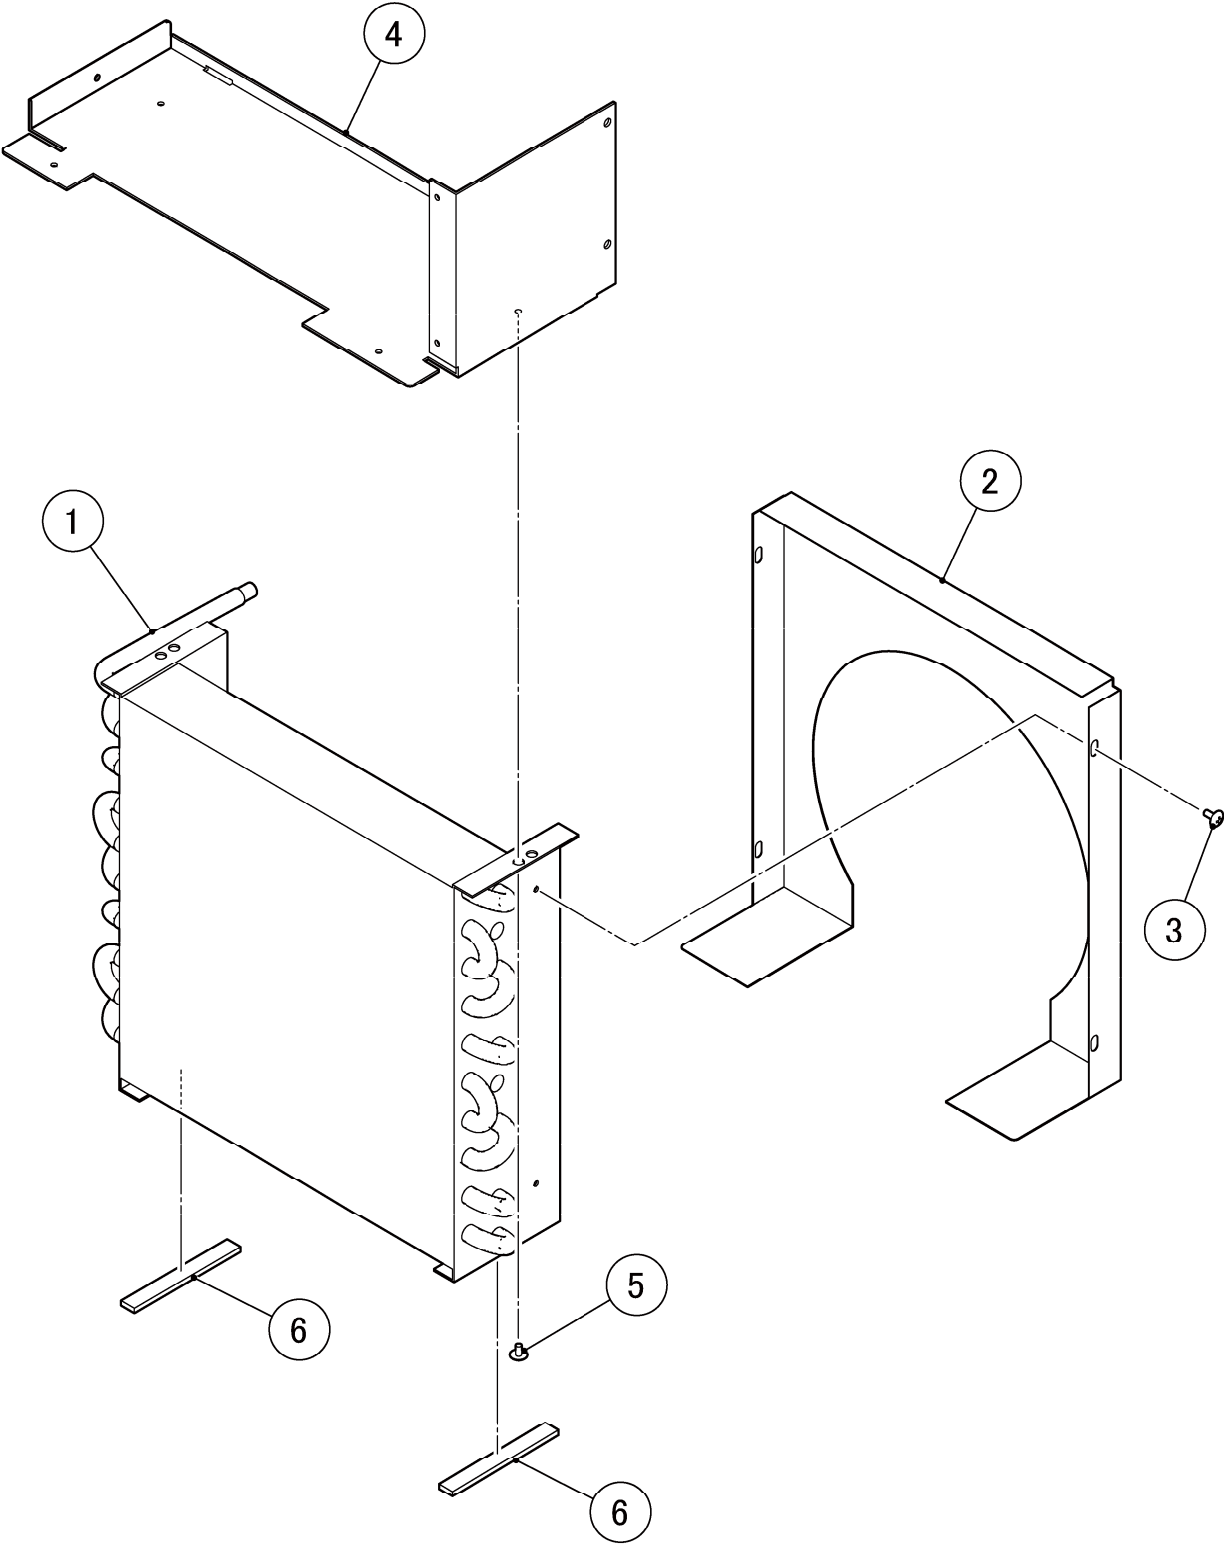


HE

[illegible]

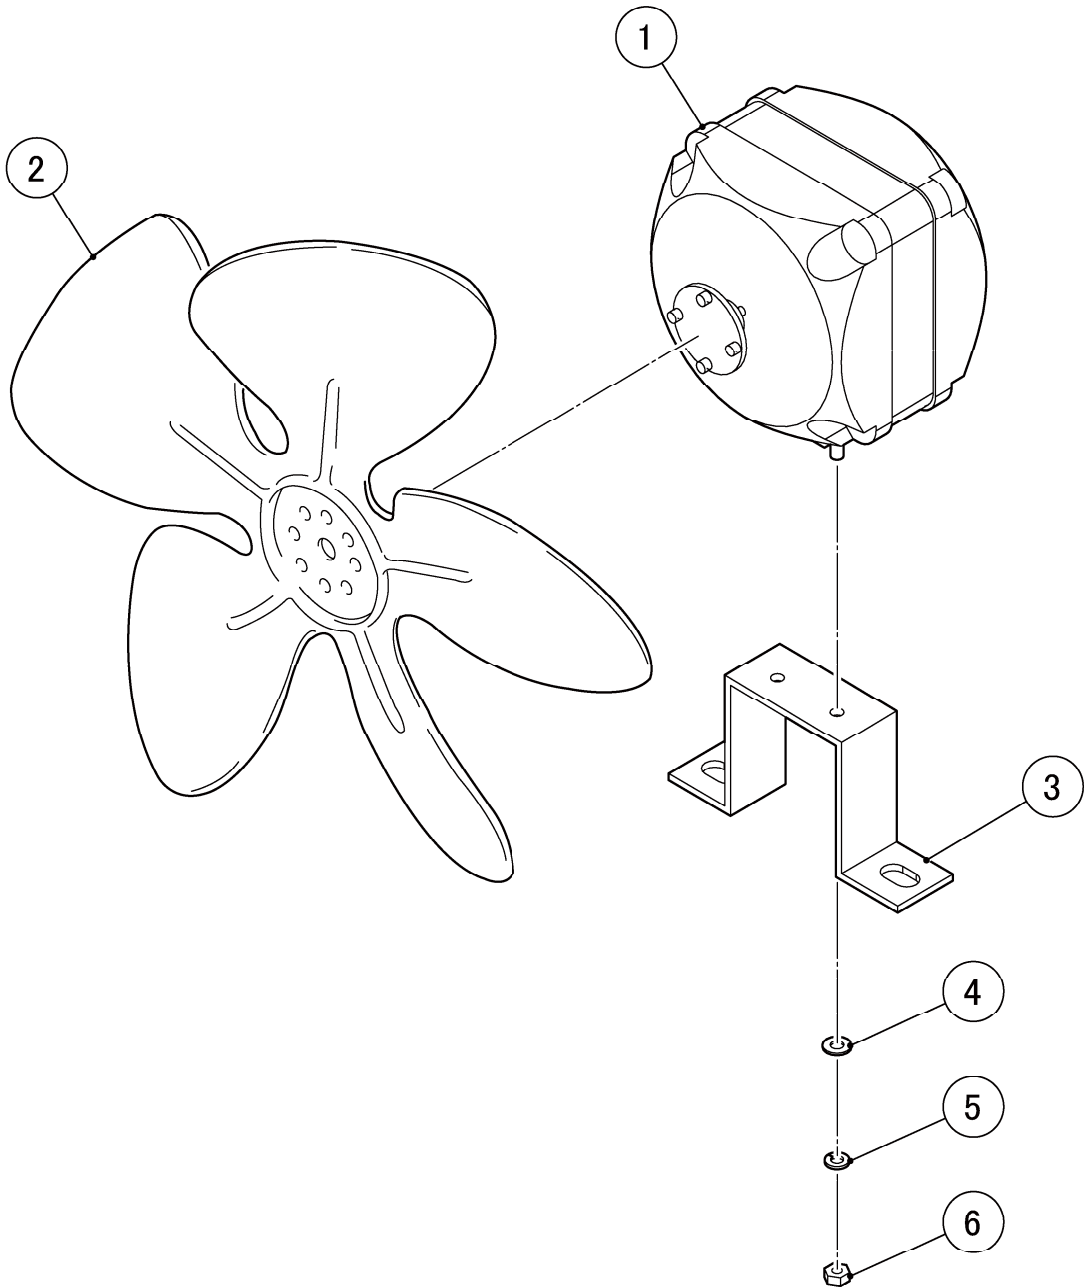

HE

[illegible]

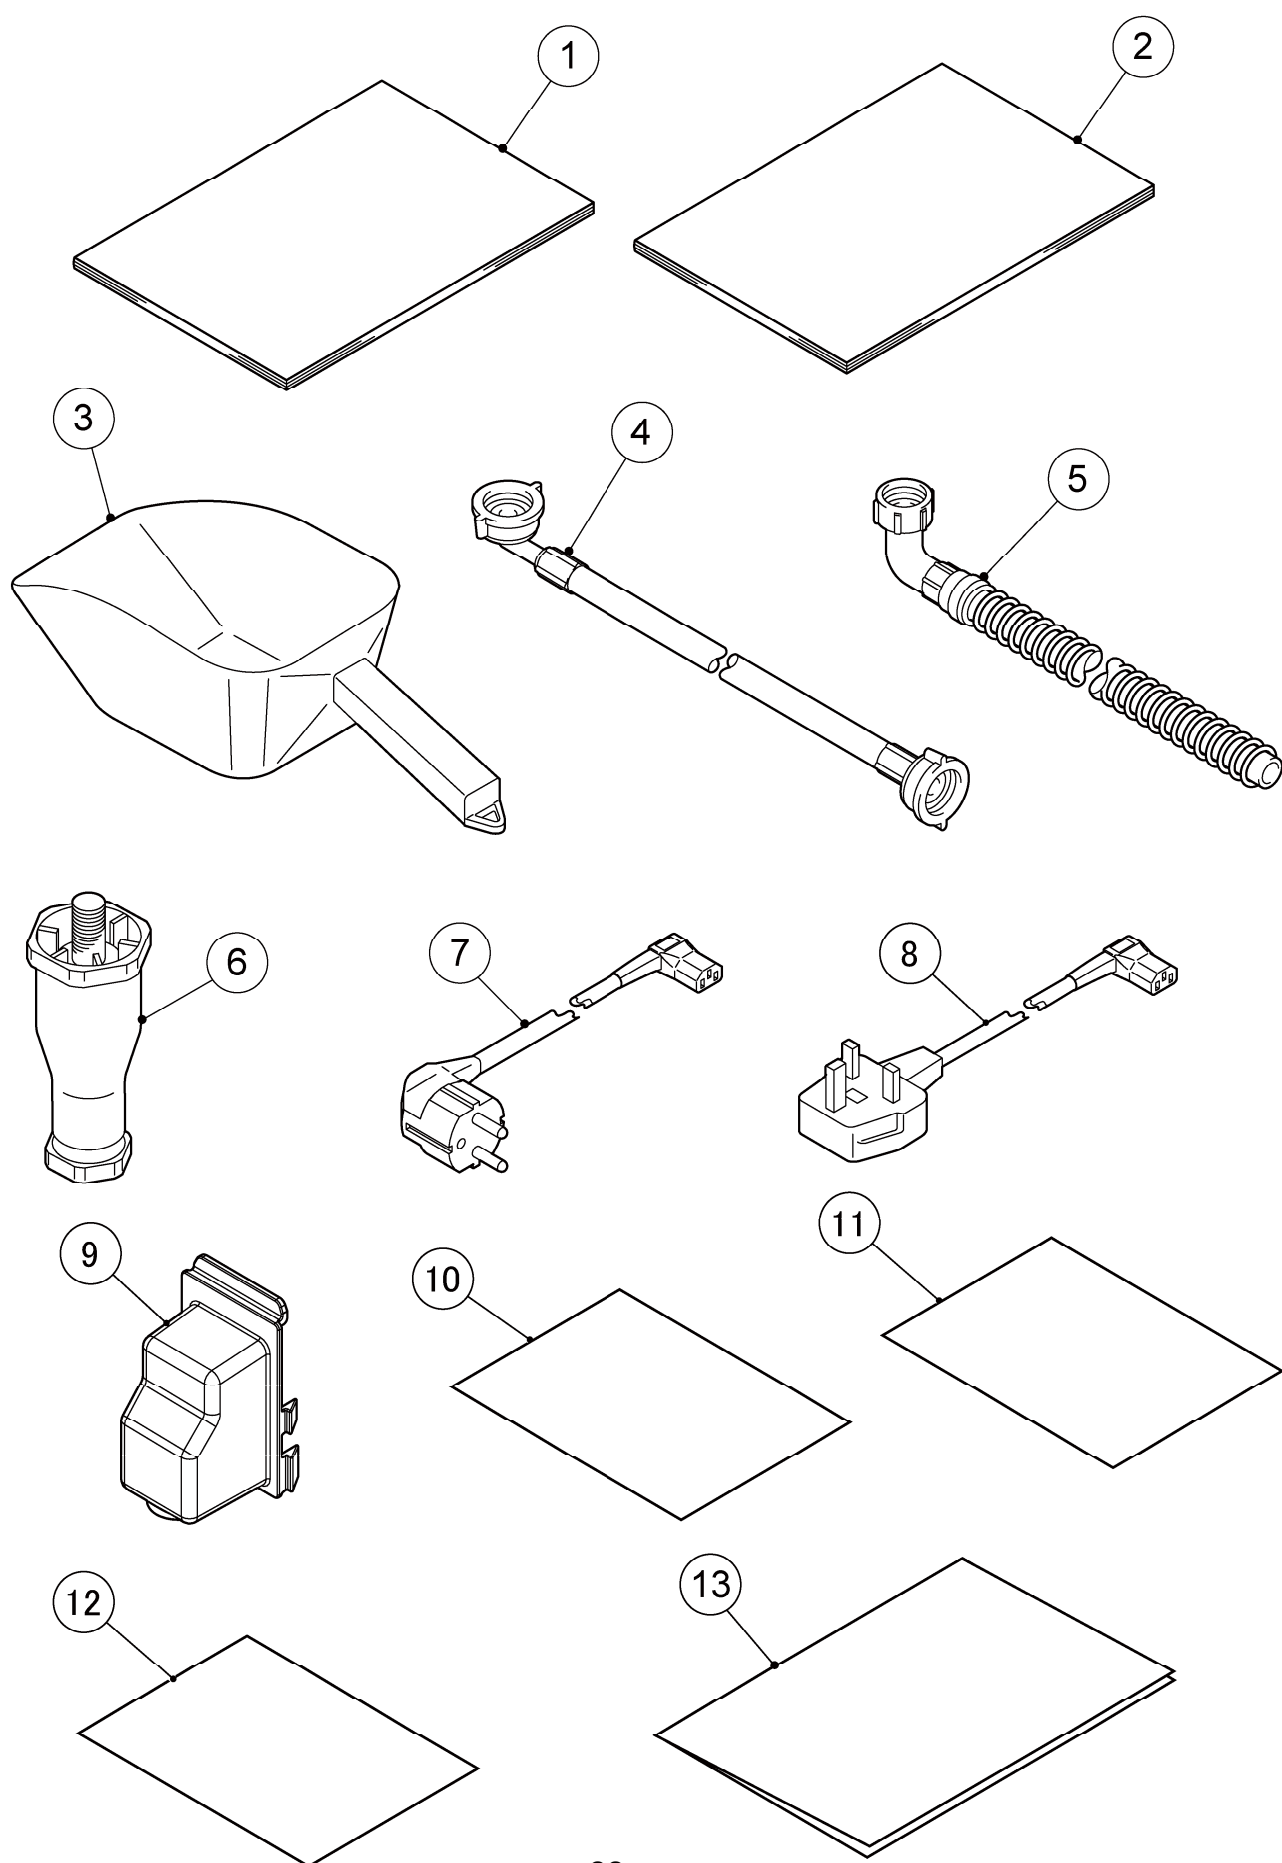

HE

[illegible]